



Enjoy your new upholstered furniture!

The manufacturer takes no responsibility for damages or injuries resulting from improper use or incorrect operation. Warranty claims do not apply to mechanism changes or improper use.

www.schillig.com

111.17-06-29D-E--3 Subject to change.



TOUCH-SENSOR

motor function

advice for your upholstered furniture
n°111

– English –



TOUCH-SENSOR

motor function

You've chosen correctly!
A furniture with function by touching.
Depending on the model, the sensor touch buttons are placed under the back cushion, between side part and seat or in the middle of the seat.

Please note the instructions on the opposite page before first usage.

Operating instructions.

*Connect the power cable [1] with the transformer and then with the socket.
Plug the cable coming from the sofa into the transformer [2].*



*By slightly touching the TOUCH-sensor in the front the function extends smoothly.
By slightly touching the TOUCH-sensor in the back the function retracts.
Some models with double motor have 4 TOUCH-sensors. Two at the front for moving the seat or the footrest, two in the back for moving the backrest.*

Attention:

- Never sit on the front edge of the extended function.
- No objects may block the mechanism.
- No cables may be led between moveable parts.
- Never grab into the mechanism.

*Repair of electronic elements has to be done by qualified employees as safety regulations have to be observed and to avoid danger. It is also valid for replacing the power cable. Cables mustn't be placed between movable parts for avoiding malfunction!
Electronic parts according to CE norm.*

