



Enjoy your new upholstered furniture!

The manufacturer takes no responsibility for damages or injuries resulting from improper use or incorrect operation. Warranty claims do not apply to mechanism changes or improper use.

www.schillig.com

110.17-06-29D-E--2 Subject to change.

FUNCTION

seat depth adjustment

advice for your upholstered furniture
N° 110

– English –



FUNCTION

seat depth adjustment

You've chosen correctly!
Sofa with manual seat function.
You can easily turn the seating area of your new sofa into a comfort zone due to the built-in seat function

Please note the instructions on the opposite page before first usage.

Operating instructions.

To enlarge the seat depth: Please grab with both hands under the middle part of your sofa and pull the seat to yourself. Therefore you can enlarge the seating area according to your wishes. The maximum seat depth is reached if you have pulled out the seat up to the stop. ▶ See image n° 1

To reduce the seat depth: To pull in the seating area again please place both hands at the seat of your sofa (centred) and push it all the way to the stop. The normal seat depth is reached. ▶ See image n° 2

To use the enlarged seat, please enlarge it completely.



- Caution!**
- Do not sit down on the front edge of the enlarged seat;
 - Never grab into the seat depth adjustment mechanism;
 - No objects may block the mechanism;

Please always activate the function from the front side of the sofa.

– English –