



Cover: O10/34 khaki



-  grid
-  comforts
-  seat height
-  seat heights
-  back heights
-  armparts
-  contrasting thread
-  headrest
-  metal colour

maXxim

12502

Whether large or small, **maXxim** 12502 fits everywhere! This model is tailor-made for all personal needs, because modern requirements can be planned. In addition to the huge range of types, you can choose from various seat comforts, heights, back heights, armparts, legs and even more options.



W.SCHILLIG

ARMCHAIRS



M60
armchair



MH60
armchair tall back

82/92/81/44
metal runner = MK2
(surcharge)

82/92/86/44
metal runner = MK2
(surcharge)


SOFAS




N60
sofa




NH60
sofa tall back




N70
sofa




NH70
sofa tall back




N80
large sofa




NH80
large sofa tall back




N90
large sofa



NH90
large sofa tall back



N100
large sofa



NH100
large sofa tall back

142/92/81/44
metal runner = MK2
(surcharge)

142/92/86/44
metal runner = MK2
(surcharge)

162/92/81/44
metal runner = MK2
(surcharge)

162/92/86/44
metal runner = MK2
(surcharge)

182/92/81/44
metal runner = MK2
(surcharge)

182/92/86/44
metal runner = MK2
(surcharge)

202/92/81/44
metal runner = MK2
(surcharge)

202/92/86/44
metal runner = MK2
(surcharge)

222/92/81/44
metal runner = MK2
(surcharge)

222/92/86/44
metal runner = MK2
(surcharge)



P60
large sofa 3 seats



PH60
large sofa 3 seats tall back



P70
large sofa 3 seats



PH70
large sofa 3 seats tall back

202/92/81/44
metal runner = MK2
(surcharge)

202/92/86/44
metal runner = MK2
(surcharge)

232/92/81/44
metal runner = MK2
(surcharge)

232/92/86/44
metal runner = MK2
(surcharge)

CORNER ELEMENTS



ET
corner element



ETH
corner element tall back

107/107/81/44
metal runner = MK2
(surcharge)

107/107/86/44
metal runner = MK2
(surcharge)



ELEMENTS WITHOUT ARMPARTS



M70K
element without
armpart

70/92/81/44



MH70K
element without
armpart tall back

70/92/86/44



M80K
element without
armpart

80/92/81/44



MH80K
element without
armpart tall back

80/92/86/44



M90K
element without
armpart

90/92/81/44



MH90K
element without
armpart tall back

90/92/86/44



M100K
element without
armpart

100/92/81/44



MH10K
element without
armpart tall back

100/92/86/44



N60K
sofa without armpart

120/92/81/44



NH60K
sofa without armpart
tall back

120/92/86/44




N70K
sofa without armpart

140/92/81/44




NH70K
sofa without armpart
tall back

140/92/86/44




N80K
large sofa without
armpart

160/92/81/44




NH80K
large sofa without
armpart tall back

160/92/86/44




N90K
large sofa without
armpart

180/92/81/44




NH90K
large sofa without
armpart tall back

180/92/86/44



N100K
large sofa without
armpart

200/92/81/44



NH10K
large sofa without
armpart tall back

200/92/86/44

ELEMENTS WITH ARMPART RIGHT



M70R
element with armpart



MH70R
element with armpart tall back



M80R
element with armpart



MH80R
element with armpart tall back



M90R
element with armpart



MH90R
element with armpart tall back



M100R
element with armpart



MH10R
element with armpart tall back



N60R
sofa with armpart



NH60R
sofa with armpart tall back

81/92/81/44

metal runner = MK1
(surcharge)

81/92/86/44

metal runner = MK1
(surcharge)

91/92/81/44

metal runner = MK1
(surcharge)

91/92/86/44

metal runner = MK1
(surcharge)

101/92/81/44

metal runner = MK1
(surcharge)

101/92/86/44

metal runner = MK1
(surcharge)

111/92/81/44

metal runner = MK1
(surcharge)

111/92/86/44


metal runner = MK1
(surcharge)

131/92/81/44

metal runner = MK1
(surcharge)

131/92/86/44


metal runner = MK1
(surcharge)




N70R
sofa with armpart




NH70R
sofa with armpart tall back




N80R
large sofa with armpart




NH80R
large sofa with arm-part tall back




N90R
large sofa with armpart




NH90R
large sofa with arm-part tall back



N100R
large sofa with armpart



NH10R
large sofa with arm-part tall back



P60R
large sofa with arm-part 3 seats



PH60R
large sofa with arm-part 3 seats tall back

151/92/81/44

metal runner = MK1
(surcharge)

151/92/86/44

metal runner = MK1
(surcharge)

171/92/81/44

metal runner = MK1
(surcharge)

171/92/86/44

metal runner = MK1
(surcharge)

191/92/81/44

metal runner = MK1
(surcharge)

191/92/86/44

metal runner = MK1
(surcharge)

211/92/81/44

metal runner = MK1
(surcharge)

211/92/86/44


metal runner = MK1
(surcharge)

191/92/81/44


metal runner = MK1
(surcharge)

191/92/86/44

metal runner = MK1
(surcharge)



P70R
large sofa with arm-part 3 seats



PH70R
large sofa with arm-part 3 seats tall back

221/92/81/44

metal runner = MK1
(surcharge)

221/92/86/44

metal runner = MK1
(surcharge)

ELEMENTS WITH ARMPART LEFT



M70L
element with armpart



MH70L
element with armpart tall back



M80L
element with armpart



MH80L
element with armpart tall back



M90L
element with armpart



MH90L
element with armpart tall back



M100L
element with armpart



MH10L
element with armpart tall back



N60L
sofa with armpart



NH60L
sofa with armpart tall back

81/92/81/44

metal runner = MK1
(surcharge)

81/92/86/44

metal runner = MK1
(surcharge)

91/92/81/44

metal runner = MK1
(surcharge)

91/92/86/44

metal runner = MK1
(surcharge)

101/92/81/44

metal runner = MK1
(surcharge)

101/92/86/44

metal runner = MK1
(surcharge)

111/92/81/44

metal runner = MK1
(surcharge)

111/92/86/44

metal runner = MK1
(surcharge)

131/92/81/44


metal runner = MK1
(surcharge)

131/92/86/44


metal runner = MK1
(surcharge)




N70L
sofa with armpart




NH70L
sofa with armpart tall back




N80L
large sofa with armpart




NH80L
large sofa with arm-part tall back




N90L
large sofa with armpart



NH90L
large sofa with arm-part tall back



N100L
large sofa with armpart



NH10L
large sofa with arm-part tall back



P60L
large sofa with arm-part 3 seats



PH60L
large sofa with arm-part 3 seats tall back

151/92/81/44

metal runner = MK1
(surcharge)

151/92/86/44

metal runner = MK1
(surcharge)

171/92/81/44

metal runner = MK1
(surcharge)

171/92/86/44

metal runner = MK1
(surcharge)

191/92/81/44

metal runner = MK1
(surcharge)

191/92/86/44

metal runner = MK1
(surcharge)

211/92/81/44

metal runner = MK1
(surcharge)

211/92/86/44


metal runner = MK1
(surcharge)

191/92/81/44


metal runner = MK1
(surcharge)

191/92/86/44

metal runner = MK1
(surcharge)



P70L
large sofa with arm-part 3 seats



PH70L
large sofa with arm-part 3 seats tall back

221/92/81/44

metal runner = MK1
(surcharge)

221/92/86/44

metal runner = MK1
(surcharge)


END ELEMENTS RIGHT



K80R
one arm chaise




KH80R
one arm chaise tall back




K100R
large one arm chaise



KH10R
large one arm chaise tall back



EG70R
corner sofa with ottoman



EC70R
corner sofa with ottoman tall back

91/170/81/44
metal runner = MK2
(surcharge)

91/170/86/44
metal runner = MK2
(surcharge)

111/170/81/44
metal runner = MK2
(surcharge)

111/170/86/44
metal runner = MK2
(surcharge)

92/211/81/44
metal runner = MK2
(surcharge)

92/211/86/44
metal runner = MK2
(surcharge)

END ELEMENTS LEFT



K80L
one arm chaise




KH80L
one arm chaise tall back




K100L
large one arm chaise



KH10L
large one arm chaise tall back



EG70L
corner sofa with ottoman



EC70L
corner sofa with ottoman tall back

91/170/81/44
metal runner = MK2
(surcharge)

91/170/86/44
metal runner = MK2
(surcharge)

111/170/81/44
metal runner = MK2
(surcharge)

111/170/86/44
metal runner = MK2
(surcharge)

92/211/81/44
metal runner = MK2
(surcharge)

92/211/86/44
metal runner = MK2
(surcharge)




OTTOMANS & ACCESSORIES

									
U60K plug-in headrest for 60 cm seat	U70K plug-in headrest for 70 cm seat	U80K plug-in headrest for 80 cm seat	U90K plug-in headrest for 90 cm seat	U100K plug-in headrest for 100 cm seat	UH60K plug-in headrest for 60 cm seat tall back	UH70K plug-in headrest for 70 cm seat tall back	UH80K plug-in headrest for 80 cm seat tall back	UH90K plug-in headrest for 90 cm seat tall back	UH10K plug-in headrest for 100 cm seat tall back
50/14/23/44	60/14/23/44	70/14/23/44	80/14/23/44	90/14/23/44	50/14/23/44	60/14/23/44	70/14/23/44	80/14/23/44	90/14/23/44
				Z					
U92 plug-in headrest	U92H plug-in headrest	G70 ottoman	G140 extra large ottoman	base leg					
60/14/23/0	60/14/23/0	70/60/44/44 metal runner = MK2 (surcharge)	140/60/44/44 metal runner = MK2 (surcharge)						

ARMPART VERSIONS

					
SAR raf SAL laf armp. A no surcharge off-the- floor NO OVERMEASURE 11/88/58/0	SBR raf SBL laf armp. B no surcharge on-the- floor NO OVERMEASURE 11/88/58/0	SCR raf SCL laf armpart C no surcharge off-the- floor OVERMEASURE 3 cm 14/84/58/0	SDR raf SDL laf armpart D no surcharge on-the- floor OVERMEASURE 3 cm 14/84/58/0	SER raf SEL laf armpart E no surcharge off-the- floor OVERM. 11 cm 21/84/56/0	SFR raf SFL laf armpart F no surcharge on-the- floor OVERM. 11 cm 21/84/56/0



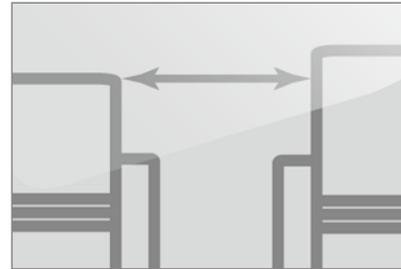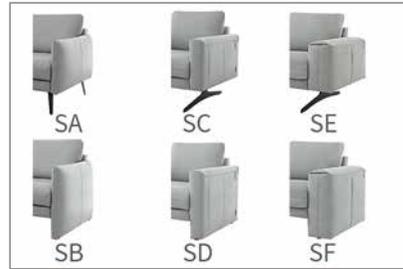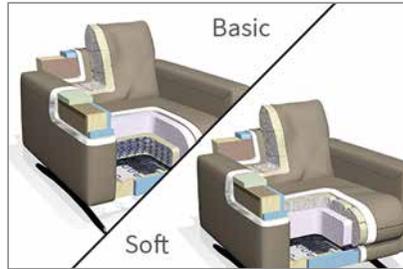

2 seat comforts/2 backrest heights

Basic or Soft. You can also choose from two backrest heights. See type plan.

Different armparts

This model is available in different armpart versions. See order information.

Back heights - tall

The model is available with standard as well as tall backs (items with the appendix "H" and "C").

Flexible plug-in headrests

The headrests with joint can be inserted into the opening between the back body and the back cushions individually.

Classy runner

A beautiful metal runner in black powder-coated (item no. MK...) is available for surcharge.

ORDER INFORMATION

Seat upholstery structure:

Comfort Basic stands for comfortable seating and Comfort Soft for modern, trendy seating comfort with a casual look. Please indicate when ordering.

2 backrest heights:

The backrest heights cannot be combined within a corner composition.

Back sides of sofas:

All pieces are genuinely upholstered at the back.

Positioning diagram:

Please send us a positioning diagram, depending on the different variations available. The connecting sides got marked in red for some elements in the type guide.

Connecting sides:

For a surcharge, the connecting sides can be supplied in the original cover instead of stretch fabric.

Seam appearance:

Decorative, felled or double seams may appear different in fabric and leather versions. For manufacturing reasons, seams may be left out of the fabric version or replaced with simple seams.

Contrasting thread:

This model is available in leather and some fabric colours with contrasting colour thread at no extra charge. You will find the specified colours in our fabric/leather trolley. Please state the no., otherwise tone-in-tone will be delivered.

All of the dimensions given are approximate dimensions in cm in width/depth/

height/seat height. We reserve the right to make changes. The measures refer to the leg height ca. 17 cm. Measures refer to SA armpart. The dimensions in terms of seat depth and total height can vary due to the zipped back cushions.

Seat depth: approx. **54 cm**

Armpart versions:

off-the-floor, with leg

SA - pointed, narrow, approx. **11 cm** wide

SC - armp. cubic, with saddle base on top, approx. **14 cm** wide (allowance per armp. + approx. **3 cm**)

SE - armpart wide, with box pleat, approx. **21 cm** wide (allowance per armp. + approx. **10 cm**)

on-the-floor, with plastic glides

SB - pointed, narrow, approx. **11 cm** wide

SD - armpart cubic, with saddle base on top, approx. **14 cm** wide (allowance per armp. + approx. **3 cm**)

SF - armpart wide, with box pleat, approx. **21 cm** wide (allowance per armp. + approx. **10 cm**)

Model-related feature:

The upholstery is deliberately processed casually to create a certain visual appearance. Waving is not a quality defect, but a model-related feature that ensures optimum seating comfort.

Note on upholstery construction:

Ticking cushions have been used in the seat and back. This can lead to the marking of individual chambers and is a typical feature of the product.

Base leg Z:

If elements and sofas without or with 1 armpart are to be placed directly against elements or sofas without or with 1 armpart, a base leg Z is required and must be ordered.

Digital fabric/leather and colour samples:

The visual appearance of the covers and colour samples may vary, samples in accordance - colour and structure deviations possible.

Note on seat height:

The final seat height on this model is only reached over time by sitting in, due to the upholstery construction.

W.SCHILLIG

LEGS

ca. 17 cm/
seat height ca.
44 cm



metal leg **different metal colours**

F L6



metal leg, **diff. metal col.**

F S1



metal runner black, surcharge

F T9



Plastic glide

F 00

approx. 19 cm/
seat height approx.
46 cm

metal leg **different metal colours**

F P5

metal leg, **diff. metal col.**

F V8

metal runner black, surcharge

F 08

Plastic glide

F 85

Leg and seat heights:

Due to different leg heights, the model is available in different seat and total heights. The leg version has to be indicated. With on-the-floor armparts, the seat height is achieved via an armpart extended downwards.

Runners:

We assemble visibly matching legs instead of the runner under the corner elements.

Plastic gliders:

The plastic glides are available for on-the-floor armpart designs, only.

Metal colours:

Some of the metal legs are available in different metal colours. Please indicate the colour when ordering.

Powder-coated:

The colours M21 silver, M56 bronze and M99

black are powder-coated.

The FL6/FP5 leg is available in the colours glossy chrome M20, bronze M56 and black M99.

The FS1/FV8 legis available in the colours glossy chrome M20, silver M21, bronze M56 and black M99.

The metal runner FT9/F08 is only available in the colour black M99.

Legs and floor protection:

With slim furniture legs with a small gliding surface, there is increased pressure on the floor. We recommend fitting glides or an underlay to protect against scratches and pressure marks on sensitive floors.

AVAILABLE METAL COLOURS



high-gloss chrome

M20



silver

M21



bronze

M56



black

M99

ORDER CHECKLIST

- Structure and cover
- Seating comfort basic or soft
- Armpart version
- Leg design/-height - seat height
- Metal runner (surcharge)
- Metal colour for legs
- Ottomans & Accessories
- Contrasting thread
- Positioning diagram




W.SCHILLIG

LIVING EXAMPLES



Cover: Z74/21 silver, armpart design SC

sofa combination
N 100 - N 80



314x274



Cover: Z74/33 green tea, armpart design SA

corner combination
K 80L laf - M 80R raf



182x170



Cover: V86/42 sheep, armpart design SC

corner combination
MH 10L laf - ETH - MH 10R raf




218x218



Cover: W60/35 light moss, armpart design SE

sofa combination
N 80 - P 70

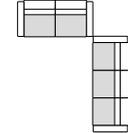

274x324

maXxim

12502




Cover: S37/35 khaki, armpart design SA



Cover: Z84/21 fango, armpart design SD

corner combination
N 90L laf - ET - N 90R raf

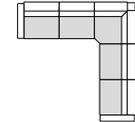


298x298




Cover: V85/36 camouflage, armpart design SD

corner combination
EC 70L laf - NH 70K - KH 80R raf



232x211

UPHOLSTERED FURNITURE FRAME STRUCTURE

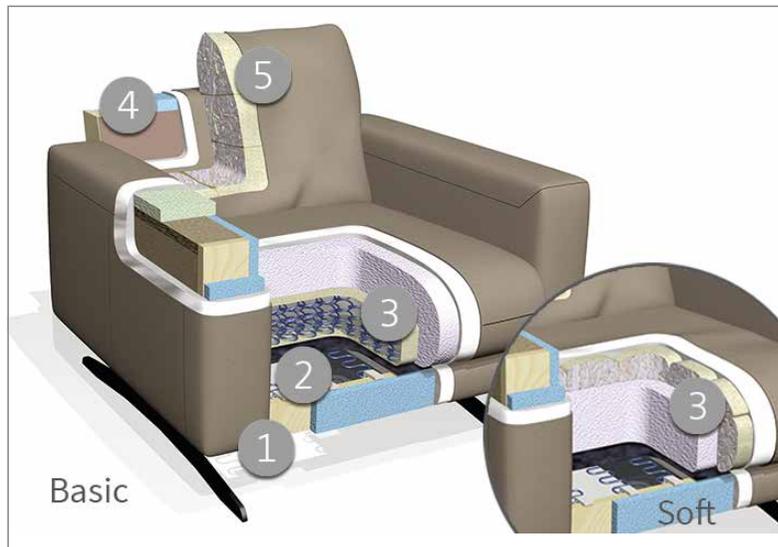

The design of the cross section shown here does not correspond to the model on this page of the catalogue.

- 1. Frame** – Beech wood structure
- 2. Seat suspension** with permanently elastic wave springs
- 3. Seat upholstery structure** - in ergo-PUR foam integrated spring core with diolen cover (Comfort Basic) or ergoPUR foam with high-quality mixture of polyester fibres and foam rods, filled in chambers (Comfort Soft)
- 4. Back suspension** – none
- 5. Back upholstery structure** with high quality mix of polyester fibres and foam rods, filled in boxes

www.schillig.com



UPHOLSTERED FURNITURE QUALITY

Upholstered furniture from passion.

For almost 75 years, this passion has led to the creation of high-quality and special pieces of furniture and designer furniture - sofas that combine elegant and contemporary design with first-class comfort. We stand for craftsmanship, trend-setting ideas, appealing design and know-how from Germany. The result is upholstered furniture with guaranteed first-class comfort and attention to detail. When selecting the materials used, we pay attention to sustainability and the conservation of resources.

- Traditional craftsmanship down to the last detail
- High-quality, environmentally friendly materials
- Careful & precise workmanship
- Cooperation with renowned furniture designers
- Production according to DIN & RAL quality guidelines of the Deutsche Gütegemeinschaft Möbel e.V.
- Regularly tested product quality „Made in Germany“
- Development at the Upper Franconian location in Ebersdorf near Coburg
- Carefully selected fabric and leather cover collections in many colours for a wide range of requirements.



quality
Made in Germany

W.SCHILLIG GmbH & Co. KG
Am Weinberg 20 - 22
96237 Ebersdorf bei Coburg
GERMANY
Telephone: +49 9562 37-0
Telefax: +49 9562 37-500
E-Mail: info@schillig.de


W.SCHILLIG