



Cover: W82/51 stone, SC armpart



aleXx

22850

Dream sofa for the individualist.

Be honest, given the choice we would all like to be sitting pretty! **aleXx** 22850 comes with different seat comforts and three leg/seat heights. You influence the appearance, because you can simply order your favourite armpart. The extensive range of elements offers greater planning possibilities partially due to the different seat depths and back heights.



W.SCHILLIG

ARMCHAIRS



ME55
armchair ST A/Z and
ST E/V available



MH55E
armchair tall back
cushion ST A/Z and
ST E/V available

85/93/77/43
Boxspring = BX1
(surcharge)
Memory Comfort = MC1 (surcharge)
extra depth = XL1
(no surcharge)

85/93/83/43
Boxspring = BX1
(surcharge)
Memory Comfort = MC1 (surcharge)
extra depth = XL1
(no surcharge)

CORNER ELEMENTS



E
pointed corner



ET
corner element



EH
pointed corner tall
back cushion



ETH
corner element tall
back cushion











94/94/77/43
Boxspring = BX3
(surcharge)
Memory Comfort = MC3 (surcharge)
extra depth = XL3
(no surcharge)

108/108/77/43
Boxspring = BX4
(surcharge)
Memory Comfort = MC4 (surcharge)
extra depth = XL4
(no surcharge)

94/94/83/43
Boxspring = BX3
(surcharge)
Memory Comfort = MC3 (surcharge)
extra depth = XL3
(no surcharge)

108/108/83/43
Boxspring = BX4
(surcharge)
Memory Comfort = MC4 (surcharge)
extra depth = XL4
(no surcharge)

SOFAS

									
N60 sofa	N70 sofa	N80 large sofa	N90 large sofa	N100 large sofa	NH60 sofa tall back cushion	NH70 sofa tall back cushion	NH80 large sofa tall back cushion	NH90 large sofa tall back cushion	NH100 large sofa tall back cushion
152/93/77/43 Boxspring = BX5 (surcharge) Memory Comfort = MC5 (surcharge) extra depth = XL5 (no surcharge)	172/93/77/43 Boxspring = BX7 (surcharge) Memory Comfort = MC7 (surcharge) extra depth = XL7 (no surcharge)	192/93/77/43 Boxspring = BX9 (surcharge) Memory Comfort = MC9 (surcharge) extra depth = XL9 (no surcharge)	212/93/77/43 Boxspring = BX10 (surcharge) Memory Comfort = MC10 (surcharge) extra depth = XL10 (no surcharge)	232/93/77/43 Boxspring = BX11 (surcharge) Memory Comfort = MC11 (surcharge) extra depth = XL11 (no surcharge)	152/93/83/43 Boxspring = BX5 (surcharge) Memory Comfort = MC5 (surcharge) extra depth = XL5 (no surcharge)	172/93/83/43 Boxspring = BX7 (surcharge) Memory Comfort = MC7 (surcharge) extra depth = XL7 (no surcharge)	192/93/83/43 Boxspring = BX9 (surcharge) Memory Comfort = MC9 (surcharge) extra depth = XL9 (no surcharge)	212/93/83/43 Boxspring = BX10 (surcharge) Memory Comfort = MC10 (surcharge) extra depth = XL10 (no surcharge)	232/93/83/43 Boxspring = BX11 (surcharge) Memory Comfort = MC11 (surcharge) extra depth = XL11 (no surcharge)




ELEMENTS WITHOUT ARMPARTS



N60K
sofa



N70K
sofa



N80K
large sofa



N90K
large sofa



N100K
large sofa w/o arm



NH60K
sofa tall back cushion



NH70K
sofa tall back cushion



NH80K
large sofa tall back cushion



NH90K
large sofa tall back cushion



NH10K
large sofa w/o arm tall back cushion

120/93/77/43
Boxspring = BX5
(surcharge)
Memory Comfort = MC5 (surcharge)
extra depth = XL5
(no surcharge)

140/93/77/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
extra depth = XL7
(no surcharge)

160/93/77/43
Boxspring = BX9
(surcharge)
Memory Comfort = MC9 (surcharge)
extra depth = XL9
(no surcharge)

180/93/77/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
extra depth = XL10
(no surcharge)

200/93/77/43
Boxspring = BX11
(surcharge)
Memory Comfort = MC11 (surcharge)
extra depth = XL11
(no surcharge)

120/93/83/43
Boxspring = BX5
(surcharge)
Memory Comfort = MC5 (surcharge)
extra depth = XL5
(no surcharge)

140/93/83/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
extra depth = XL7
(no surcharge)

160/93/83/43
Boxspring = BX9
(surcharge)
Memory Comfort = MC9 (surcharge)
extra depth = XL9
(no surcharge)

180/93/83/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
extra depth = XL10
(no surcharge)

200/93/83/43
Boxspring = BX11
(surcharge)
Memory Comfort = MC11 (surcharge)
extra depth = XL11
(no surcharge)

ELEMENTS WITH ARMPART RIGHT



M60R
element w/ arm



M70R
element w/ arm



M80R
element w/ arm



M90R
element w/ arm



MH60R
element w/ arm tall back cushion



MH70R
element w/ arm tall back cushion



MH80R
element w/ arm tall back cushion



MH90R
element w/ arm tall back cushion

76/93/77/43
Boxspring = BX1
(surcharge)
Memory Comfort = MC1 (surcharge)
extra depth = XL1
(no surcharge)

86/93/77/43
Boxspring = BX2
(surcharge)
Memory Comfort = MC2 (surcharge)
extra depth = XL2
(no surcharge)

96/93/77/43
Boxspring = BX3
(surcharge)
Memory Comfort = MC3 (surcharge)
extra depth = XL3
(no surcharge)

106/93/77/43
Boxspring = BX4
(surcharge)
Memory Comfort = MC4 (surcharge)
extra depth = XL4
(no surcharge)

76/93/83/43
Boxspring = BX1
(surcharge)
Memory Comfort = MC1 (surcharge)
extra depth = XL1
(no surcharge)

86/93/83/43
Boxspring = BX2
(surcharge)
Memory Comfort = MC2 (surcharge)
extra depth = XL2
(no surcharge)

96/93/83/43
Boxspring = BX3
(surcharge)
Memory Comfort = MC3 (surcharge)
extra depth = XL3
(no surcharge)

106/93/83/43
Boxspring = BX4
(surcharge)
Memory Comfort = MC4 (surcharge)
extra depth = XL4
(no surcharge)




W.SCHILLIG



N60R
sofa w/ arm




N70R
sofa w/ arm



N80R
large sofa w/ arm



N90R
large sofa w/ arm



N100R
large sofa w/ arm



NH60R
sofa w/ arm tall back
cushion



NH70R
sofa w/ arm tall back
cushion



NH80R
large sofa w/ arm tall
back cushion



NH90R
large sofa w/ arm tall
back cushion



NH10R
large sofa w/ arm tall
back cushion

136/93/77/43
Boxspring = BX5
(surcharge)
Memory Comfort = MC5 (surcharge)
extra depth = XL5
(no surcharge)

156/93/77/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
extra depth = XL7
(no surcharge)

176/93/77/43
Boxspring = BX9
(surcharge)
Memory Comfort = MC9 (surcharge)
extra depth = XL9
(no surcharge)

196/93/77/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
extra depth = XL10
(no surcharge)

216/93/77/43
Boxspring = BX11
(surcharge)
Memory Comfort = MC11 (surcharge)
extra depth = XL11
(no surcharge)

136/93/83/43
Boxspring = BX5
(surcharge)
Memory Comfort = MC5 (surcharge)
extra depth = XL5
(no surcharge)

156/93/83/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
extra depth = XL7
(no surcharge)

176/93/83/43
Boxspring = BX9
(surcharge)
Memory Comfort = MC9 (surcharge)
extra depth = XL9
(no surcharge)

196/93/83/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
extra depth = XL10
(no surcharge)

216/93/83/43
Boxspring = BX11
(surcharge)
Memory Comfort = MC11 (surcharge)
extra depth = XL11
(no surcharge)

ELEMENTS WITH ARMPART LEFT



M60L
element w/ arm

76/93/77/43
Boxspring = BX1
(surcharge)
Memory Comfort = MC1 (surcharge)
extra depth = XL1
(no surcharge)



M70L
element w/ arm

86/93/77/43
Boxspring = BX2
(surcharge)
Memory Comfort = MC2 (surcharge)
extra depth = XL2
(no surcharge)



M80L
element w/ arm

96/93/77/43
Boxspring = BX3
(surcharge)
Memory Comfort = MC3 (surcharge)
extra depth = XL3
(no surcharge)



M90L
element w/ arm

106/93/77/43
Boxspring = BX4
(surcharge)
Memory Comfort = MC4 (surcharge)
extra depth = XL4
(no surcharge)



MH60L
element w/ arm tall
back cushion

76/93/83/43
Boxspring = BX1
(surcharge)
Memory Comfort = MC1 (surcharge)
extra depth = XL1
(no surcharge)



MH70L
element w/ arm tall
back cushion

86/93/83/43
Boxspring = BX2
(surcharge)
Memory Comfort = MC2 (surcharge)
extra depth = XL2
(no surcharge)



MH80L
element w/ arm tall
back cushion

96/93/83/43
Boxspring = BX3
(surcharge)
Memory Comfort = MC3 (surcharge)
extra depth = XL3
(no surcharge)



MH90L
element w/ arm tall
back cushion

106/93/83/43
Boxspring = BX4
(surcharge)
Memory Comfort = MC4 (surcharge)
extra depth = XL4
(no surcharge)



N60L
sofa w/ arm

136/93/77/43
Boxspring = BX5
(surcharge)
Memory Comfort = MC5 (surcharge)
extra depth = XL5
(no surcharge)



N70L
sofa w/ arm

156/93/77/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
extra depth = XL7
(no surcharge)




N80L
large sofa w/ arm

176/93/77/43
Boxspring = BX9
(surcharge)
Memory Comfort = MC9 (surcharge)
extra depth = XL9
(no surcharge)



N90L
large sofa w/ arm

196/93/77/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
extra depth = XL10
(no surcharge)



N100L
large sofa w/ arm

216/93/77/43
Boxspring = BX11
(surcharge)
Memory Comfort = MC11 (surcharge)
extra depth = XL11
(no surcharge)



NH60L
sofa w/ arm tall back
cushion

136/93/83/43
Boxspring = BX5
(surcharge)
Memory Comfort = MC5 (surcharge)
extra depth = XL5
(no surcharge)



NH70L
sofa w/ arm tall back
cushion

156/93/83/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
extra depth = XL7
(no surcharge)



NH80L
large sofa w/ arm tall
back cushion

176/93/83/43
Boxspring = BX9
(surcharge)
Memory Comfort = MC9 (surcharge)
extra depth = XL9
(no surcharge)



NH90L
large sofa w/ arm tall
back cushion

196/93/83/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
extra depth = XL10
(no surcharge)



NH10L
large sofa w/ arm tall
back cushion

216/93/83/43
Boxspring = BX11
(surcharge)
Memory Comfort = MC11 (surcharge)
extra depth = XL11
(no surcharge)




END ELEMENTS RIGHT



K70R
one arm chaise

88/153/77/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
extra depth = XL7
(no surcharge)



KL90R
deep one arm chaise

108/176/77/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
extra depth = XL10
(no surcharge)




KH70R
one arm chaise tall
back cushion

88/153/83/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
extra depth = XL7
(no surcharge)



KC90R
deep one arm chaise
tall back cushion

108/176/83/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
extra depth = XL10
(no surcharge)



EG70R
corner sofa with
ottoman

97/218/77/43
Boxspring = BX12
(surcharge)
Memory Comfort = MC12 (surcharge)
extra depth = XL12
(no surcharge)



EC70R
corner sofa with
ottoman tall back
cushion

97/218/83/43
Boxspring = BX12
(surcharge)
Memory Comfort = MC12 (surcharge)
extra depth = XL12
(no surcharge)

END ELEMENTS LEFT



K70L
one arm chaise



KL90L
deep one arm chaise




KH70L
one arm chaise tall
back cushion



KC90L
deep one arm chaise
tall back cushion



EG70L
corner sofa with
ottoman



EC70L
corner sofa with
ottoman tall back
cushion

88/153/77/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
extra depth = XL7
(no surcharge)

108/176/77/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
extra depth = XL10
(no surcharge)


88/153/83/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
extra depth = XL7
(no surcharge)

108/176/83/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
extra depth = XL10
(no surcharge)


97/218/77/43
Boxspring = BX12
(surcharge)
Memory Comfort = MC12 (surcharge)
extra depth = XL12
(no surcharge)

97/218/83/43
Boxspring = BX12
(surcharge)
Memory Comfort = MC12 (surcharge)
extra depth = XL12
(no surcharge)

FREE-STANDING ELEMENTS RIGHT



C70R
free-standing sofa
with ottoman



C80R
free-standing sofa
with ottoman



CH70R
free-standing sofa
with ottoman tall
back cushion



CH80R
free-standing sofa
with ottoman tall
back cushion

214/97/77/43
Boxspring = BX12
(surcharge)
Memory Comfort = MC12 (surcharge)
extra depth = XL12
(no surcharge)

234/97/77/43
Boxspring = BX13
(surcharge)
Memory Comfort = MC13 (surcharge)
extra depth = XL13
(no surcharge)


214/97/83/43
Boxspring = BX12
(surcharge)
Memory Comfort = MC12 (surcharge)
extra depth = XL12
(no surcharge)

234/97/83/43
Boxspring = BX13
(surcharge)
Memory Comfort = MC13 (surcharge)
extra depth = XL13
(no surcharge)

FREE-STANDING ELEMENTS LEFT



C70L
free-standing sofa
with ottoman



C80L
free-standing sofa
with ottoman



CH70L
free-standing sofa
with ottoman tall
back cushion



CH80L
free-standing sofa
with ottoman tall
back cushion

214/97/77/43
Boxspring = BX12
(surcharge)
Memory Comfort = MC12 (surcharge)
extra depth = XL12
(no surcharge)

234/97/77/43
Boxspring = BX13
(surcharge)
Memory Comfort = MC13 (surcharge)
extra depth = XL13
(no surcharge)

214/97/83/43
Boxspring = BX12
(surcharge)
Memory Comfort = MC12 (surcharge)
extra depth = XL12
(no surcharge)

234/97/83/43
Boxspring = BX13
(surcharge)
Memory Comfort = MC13 (surcharge)
extra depth = XL13
(no surcharge)

OTTOMANS



G60
ottoman



G120
large ottoman



G140
extra large ottoman



G160
extra large ottoman

60/60/43/0
Boxspring = BX1
(surcharge)
Memory Comfort = MC1 (surcharge)
castors = RO
(surcharge)

120/60/43/0
Boxspring = BX5
(surcharge)
Memory Comfort = MC5 (surcharge)
castors = RO
(surcharge)

140/60/43/0
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
castors = RO
(surcharge)

160/60/43/0
Boxspring = BX8
(surcharge)
Memory Comfort = MC8 (surcharge)
castors = RO
(surcharge)

ACCESSORIES



U
armchair pillow

46/52/0



UAR
pillow with non-slip matting (leather version)

60/60/1/0



U92
plug-in headrest

59/11/22/0



U55K
plug-in headrest for 55 cm seat

45/11/22/0



U60K
plug-in headrest for 60 cm seat

50/11/22/0



U70K
plug-in headrest for 70 cm seat

60/11/22/0



U80K
plug-in headrest for 80 cm seat

70/11/22/0



U90K
plug-in headrest for 90 cm seat

80/11/22/0



U100K
plug-in headrest for 100 cm seat

90/11/22/0

Z
base leg



ARMPART VERSIONS



SAR raf
SAL laf
arm A
no surcharge
NO OVERMEASURE

/1/1/0



SZR re
SZL li
arm Z
no surcharge
NO OVERMEASURE



SBR raf
SBL laf
arm B
plus surcharge
overm. + 2 cm per ap.

2/1/1/0



SYR re
SYL li
arm Y
plus surcharge
overm. + 2 cm per ap.



SCR raf
SCL laf
arm C
no surcharge
overm. + 10 cm per ap.

10/1/1/0



SXR re
SXL li
arm X
no surcharge
overm. + 10 cm per ap.



SDR raf
SDL laf
arm D
plus surcharge
overm. + 22 cm per ap.

22/1/1/0

armpart adjust. =
SV1 (surcharge)



SWR re
SWL li
arm W
plus surcharge
overm. + 22 cm per ap.





armpart adjust. =
SV1 (surcharge)



SER raf
SEL laf
arm E
no surcharge
dim. - 8 cms



SVR re
SVL li
arm V
no surcharge
dim. - 8 cms

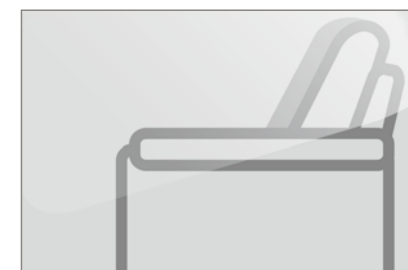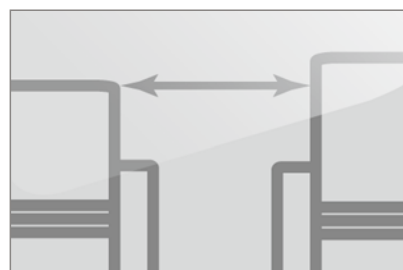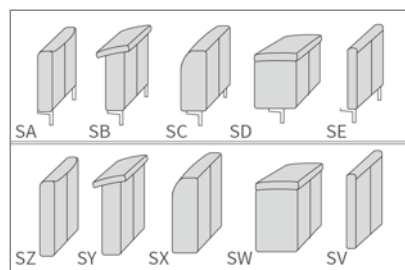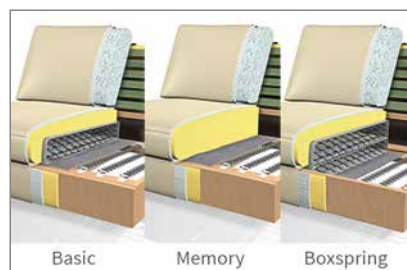

3 seat comforts/2 back heights

Basic, memory foam (surcharge) or Boxspring with additional pocket spring core under-springing (surcharge). Choose from 2 backrest heights.

10 armparts - 2 flexible

SD and SW can be equipped with the armpart adjustment with notch function (item no. = SV).

Back heights - tall

The model is available with standard as well as tall backs (items with the appendix "H" and "C").

Flexible plug-in headrests

The headrests with joint can be inserted into the opening between the back body and the back cushions individually.

Two seat depths

The model is available in two seat depths. The seat depth is achieved via the back cushion thickness. Art. no. Excess depth = XL... (without surcharge).

ORDER INFORMATION

Armpart shapes:

The armchairs are available with the armparts SA/SZ and SE/SV, only.

Flexible armparts:

Maximum load capacity up to 25 kg, they are not seats.

Free-standing elements:

Please note that the orientation "left/right" is the position of the armpart.

Standard and extra tall elements:

Elements with standard back height are shown light grey coloured, extra tall elements dark grey coloured. They cannot be combined with each other.

Seam appearance:

Decorative, felled or double seams may appear different in fabric and leather versions. For manufacturing reasons, seams may be left out of the fabric version or replaced with simple

www.schillig.com

seams.

Contrasting thread:

This model is available in leather and some fabric colours with contrasting colour thread at no extra charge. You will find the specified colours in our fabric/leather trolley. Please state the no., otherwise tone-in-tone will be delivered.

All of the dimensions given are approximate dimensions in cm. We reserve the right to make changes. Dimensions are given as follows: width/depth/height/seat height and refer to the leg height of 13 cm and armpart SA (width 16 cm). Elements with ottoman have a total depth of ca. 97 cm depending on the ottoman at the end's depth.

Seat depth: approx. **56 cm**

Extra deep seat depth: ca. **59 cm**

Seat height: approx. **43/45/47 cm**

Armpart versions:

off-the-floor, with leg

SA - cubic, width approx. **16 cm**

SB - narrow, with pillow, width approx. **18 cm** - overmeasure + approx. **2 cm**, surcharge

SC - cubic, angled inside, width approx. **26 cm** - overmeasure + approx. **10 cm**

SD - wide, with pillow, width approx. **38 cm** - overmeasure + approx. **22 cm**, surcharge, also available with armpart adjustment

SE - very narrow, rounded on top, width approx. **8 cm** - deviation - approx. ca. **8 cm**

on-the-floor, with plastic glide

SZ - cubic, width approx. **16 cm**

SY - narrow, with pillow, width approx. **18 cm** - overmeasure + approx. **2 cm**, surcharge

SX - cubic, angled inside, width approx. **26 cm** - overmeasure + ca. **10 cm**

SW - wide, with pillow, width approx. **38 cm** - overmeasure + approx. **2 cm**, surcharge

SV - very narrow, rounded on top, width approx.

8 cm - deviation - approx. ca. 8 cm

The armparts SE and SV are smaller than the base armparts SA and SZ. Thus a deviation of approx. 8 cm is given. When ordering one arm chair in conjunction with the narrow armparts SE and SV, the ottoman at the front of the one arm chair is not upholstered wide.

Crease formation:

Fabric and leather stretch during use, "creases" may form in the cover. This has no influence on use, function and service life and does not constitute a material defect.

Note on upholstery construction:

Ticking cushions have been used in the back. These may show under the cover. This is a typical feature of the product.

UAR cushion with anti-slip mat:

The UAR pillow in leather has an anti-slip mat. In everyday use, there is no discolouration/material detachment on the leather.

Digital fabric/leather and colour samples:


The visual appearance of the covers and colour samples may vary, samples in accordance - colour and structure deviations possible.

Technical change regarding the plug-in head restraints:

From order date 1st November 2024, the plug-in head restraints will no longer be supplied with a metal bracket in glossy chrome but in black powder-coated.


W. SCHILLIG

LEGS

ca. 13 cm/ seat height ca. 43 cm		metal leg, gloss		metal leg diff. metal col.		metal runner, gloss		metal castor/ottoman, surcharge		metal leg, diff. metal col.		wooden leg oiled oak P58		Plastic glide
	F 70		F 7P		F 7S		F 6R		F S1		F Y2		F 00	
ca. 15 cm/ seat height ca. 45 cm		metal leg, gloss		metal leg diff. metal col.		metal runner, gloss		metal castor/ottoman, surcharge		metal leg, diff. metal col.		wooden leg oiled oak P58		Plastic glide
	F 6P		F 7Q		F 7T		F 7R		F V8		F Y3		F 85	
ca. 17 cm/ seat height ca. 47 cm		metal leg, gloss		metal leg diff. metal col.		metal runner, gloss				metal leg, diff. metal col.		wooden leg oiled oak P58		Plastic glide
	F 7L		F V1		F V2				F 4G		F 9Z		F 4F	

Leg and seat heights:

Due to different leg heights, the model is available in different seat and total heights. The leg version has to be indicated. With on-the-floor armparts, the seat height is achieved via an armpart extended downwards. The legs F 7P/F7Q/FV1, F70/F6P/F7L and FS1/FV8/F4G are wider than the narrow armparts and extend to the frame. **Castors**

for ottomans are available in two heights only, for techn. reasons.

Castors for ottomans:
Every ottoman (except connected ottomans) can be equipped with castors for surcharge. The item no. is "RO". Two of the castors can be fixed. They are available in a variety of heights.

Runners:

We assemble visibly matching legs instead of the runner under the corner elements. At the W-elements optically matching legs are mounted generally instead of the runner.

Plastic gliders:

The plastic glides are available for on-the-floor armpart designs, only.

Metal colours:

Some of the metal legs are available in diffe-

rent metal colours. Please indicate the colour when ordering.













Leg and floor protection:

Slim furniture legs with a small gliding surface exert increased pressure on the floor. For sensitive floors, we recommend fitting glides/ an underlay to protect against scratches and pressure marks.





ORDER CHECKLIST

- Articles and cover
- Seating comfort Basic, Memory (surcharge) or Boxspring (surcharge)
- Armpart version
- Flexible armparts (surcharge)
- Seat height 43 cm/45 cm, 47 cm (not available with every leg)
- Extra deep seat (no surcharge)
- Leg design/-height - seat height
- Metal colour for legs
- Ottomans & Accessories
- Castors for ottomans (surcharge)
- Positioning diagram
- Contrasting thread

LEGS

ca. 13 cm/ seat height ca. 43 cm							
	metal leg, gloss	metal leg diff. metal col.	metal runner, gloss	metal castor/ottoman, surcharge	metal leg, diff. metal col.	wooden leg oiled oak P58	Plastic glide
	F 70	F 7P	F 7S	F 6R	F S1	F Y2	F 00
ca. 15 cm/ seat height ca. 45 cm							
	metal leg, gloss	metal leg diff. metal col.	metal runner, gloss	metal castor/ottoman, surcharge	metal leg, diff. metal col.	wooden leg oiled oak P58	Plastic glide
	F 6P	F 7Q	F 7T	F 7R	F V8	F Y3	F 85
ca. 17 cm/ seat height ca. 47 cm							
	metal leg, gloss	metal leg diff. metal col.	metal runner, gloss		metal leg, diff. metal col.	wooden leg oiled oak P58	Plastic glide
	F 7L	F V1	F V2		F 4G	F 9Z	F 4F

AVAILABLE METAL COLOURS

			
high-gloss chrome	silver	bronze	black
M20	M21	M56	M99

ORDER CHECKLIST

- Articles and cover
- Seating comfort Basic, Memory (surcharge) or Boxspring (surcharge)
- Armpart version
- Flexible armparts (surcharge)
- Seat height 43 cm/45 cm, 47 cm (not available with every leg)
- Extra deep seat (no surcharge)
- Leg design/-height - seat height
- Metal colour for legs
- Ottomans & Accessories
- Castors for ottomans (surcharge)
- Positioning diagram
- Contrasting thread

aleXx


22850

LIVING EXAMPLES



Cover: Z69/50 cognac, SC armpart

sofa combination
N 70 - N 80

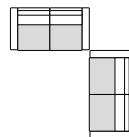


265x285



Cover: Z73/42 white, SB armpart

corner combination
EC 70L laf - NH 70K - KH 70R raf




325x218



Cover: Z77/95 graphite, SD armpart

sofa combination
N 80 - C 70 L laf

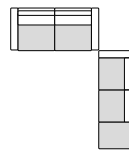

289x307



Cover: W82/27 blue, SC armpart

corner combination
N 80L laf - KL 90R raf



284x176



W.SCHILLIG

aleXx

22850

LIVING EXAMPLES




Cover: Z78/15 blush, SE arm



Cover: W82/51 stone, SC arm

corner combination
N 80L laf - KL 90R raf




284x176



Cover: W82/99 black, SC arm

corner combination
N 80L laf - KL 90R raf




284x176



Cover: Z69/51 tobacco, SD arm

sofa combination
N 80 - C 70 L laf

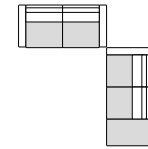

289x307

LIVING EXAMPLES



Cover: Z69/22 light grey, SE armpart



Cover: Z69/50 cognac, SE armpart



Cover: Z78/21 steel, SE armpart

UPHOLSTERED FURNITURE FRAME STRUCTURE



The design of the cross-section shown here is based on a sample and serves to illustrate the upholstery structure.

- 1. Frame** – Beech wood structure
- 2. Seat suspension** with permanently elastic wave springs
- 3. Seat upholstery structure** – of **ergo**-PUR foam with coil spring core and diolen cover. Or seating comfort Memory with memory foam (surcharge). Or seating comfort Boxspring with additionally Bonell coil spring core next to the standard coil spring core (surcharge)
- 4. Back suspension** due to upholstery strap
- 5. Back upholstery structure** with high quality mix of polyester fibres and foam rods, filled in boxes

www.schillig.com



Upholstered furniture from passion.

For 75 years, this passion has led to the creation of high-quality and special pieces of furniture and designer furniture - sofas that combine elegant and contemporary design with first-class comfort. We stand for craftsmanship, trend-setting ideas, appealing design and know-how from Germany. The result is upholstered furniture with guaranteed first-class comfort and attention to detail. When selecting the materials used, we pay attention to sustainability and the conservation of resources.

- Traditional craftsmanship down to the last detail
- High-quality, environmentally friendly materials
- Careful & precise workmanship
- Cooperation with renowned furniture designers
- Production according to DIN & RAL quality guidelines of the Deutsche Gütegemeinschaft Möbel e.V.
- Regularly tested product quality "Made in Germany"
- Development at the Upper Franconian location in Ebersdorf near Coburg
- Carefully selected fabric and leather cover collections in many colours for a wide range of requirements.



German
quality
Made in Europe

W.SCHILLIG GmbH & Co. KG
Am Weinberg 20 - 22
96237 Ebersdorf bei Coburg
GERMANY
Telephone: +49 9562 37-0
Telefax: +49 9562 37-500
E-Mail: info@schillig.de


W.SCHILLIG