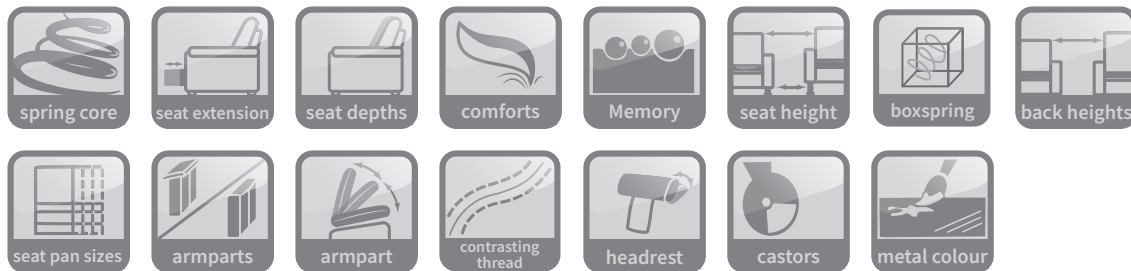




Cover: O10/43 ivory, SD armpart



aleXx

22850

Dream sofa for the individualist.

Be honest, given the choice we would all like to be sitting pretty! **aleXx** 22850 comes with different seat comforts and three leg/seat heights. You influence the appearance, because you can simply order your favourite armpart. The extensive range of elements offers greater planning possibilities partially due to the different seat depths and back heights. The sofas without or with armparts on the right/left can now also be optionally equipped with our motorised pull-out seat. For more seating or reclining space on your sofa, tailored to your individual needs.



W.SCHILLIG

ARMCHAIRS



ME55
armchair ST A/Z and
ST E/V available



MH55E
armchair tall back
cushion ST A/Z and
ST E/V available

85/93/77/43
Boxspring = BX1
(surcharge)
Memory Comfort = MC1 (surcharge)
extra depth = XL1
(no surcharge)

85/93/83/43
Boxspring = BX1
(surcharge)
Memory Comfort = MC1 (surcharge)
extra depth = XL1
(no surcharge)

CORNER ELEMENTS



E
pointed corner



ET
corner element



EH
pointed corner tall
back cushion



ETH
corner element tall
back cushion

94/94/77/43
Boxspring = BX3
(surcharge)
Memory Comfort = MC3 (surcharge)
extra depth = XL3
(no surcharge)

108/108/77/43
Boxspring = BX4
(surcharge)
Memory Comfort = MC4 (surcharge)
extra depth = XL4
(no surcharge)

94/94/83/43
Boxspring = BX3
(surcharge)
Memory Comfort = MC3 (surcharge)
extra depth = XL3
(no surcharge)

108/108/83/43
Boxspring = BX4
(surcharge)
Memory Comfort = MC4 (surcharge)
extra depth = XL4
(no surcharge)

SOFAS



N60
sofa




N70
sofa



N80
large sofa



N90
large sofa



N100
large sofa



NH60
sofa tall back cushion



NH70
sofa tall back cushion



NH80
large sofa tall back
cushion



NH90
large sofa tall back
cushion



NH100
large sofa tall back
cushion

152/93/77/43
Boxspring = BX5
(surcharge)
Memory Comfort = MC5 (surcharge)
extra depth = XL5
(no surcharge)

172/93/77/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
extra depth = XL7
(no surcharge)

192/93/77/43
Boxspring = BX9
(surcharge)
Memory Comfort = MC9 (surcharge)
extra depth = XL9
(no surcharge)

212/93/77/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
extra depth = XL10
(no surcharge)

232/93/77/43
Boxspring = BX11
(surcharge)
Memory Comfort = MC11 (surcharge)
extra depth = XL11
(no surcharge)

152/93/83/43
Boxspring = BX5
(surcharge)
Memory Comfort = MC5 (surcharge)
extra depth = XL5
(no surcharge)

172/93/83/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
extra depth = XL7
(no surcharge)

192/93/83/43
Boxspring = BX9
(surcharge)
Memory Comfort = MC9 (surcharge)
extra depth = XL9
(no surcharge)

212/93/83/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
extra depth = XL10
(no surcharge)

232/93/83/43
Boxspring = BX11
(surcharge)
Memory Comfort = MC11 (surcharge)
extra depth = XL11
(no surcharge)

ELEMENTS WITHOUT ARMPARTS



N60K
sofa

120/93/77/43
Boxspring = BX5
(surcharge)
Memory Comfort = MC5 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL5
(no surcharge)



N70K
sofa

140/93/77/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL7
(no surcharge)



N80K
large sofa

160/93/77/43
Boxspring = BX9
(surcharge)
Memory Comfort = MC9 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL9
(no surcharge)



N90K
large sofa

180/93/77/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL10
(no surcharge)



N100K
large sofa w/o arm

200/93/77/43
Boxspring = BX11
(surcharge)
Memory Comfort = MC11 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL11
(no surcharge)



NH60K
sofa tall back cushion

120/93/83/43
Boxspring = BX5
(surcharge)
Memory Comfort = MC5 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL5
(no surcharge)



NH70K
sofa tall back cushion

140/93/83/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL7
(no surcharge)



NH80K
large sofa tall back cushion

160/93/83/43
Boxspring = BX9
(surcharge)
Memory Comfort = MC9 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL9
(no surcharge)



NH90K
large sofa tall back cushion

180/93/83/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL10
(no surcharge)



NH10K
large sofa w/o arm tall back cushion

200/93/83/43
Boxspring = BX11
(surcharge)
Memory Comfort = MC11 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL11
(no surcharge)

ELEMENTS WITH ARMPART RIGHT



M60R
element w/ arm



M70R
element w/ arm



M80R
element w/ arm



M90R
element w/ arm



MH60R
element w/ arm tall
back cushion



MH70R
element w/ arm tall
back cushion



MH80R
element w/ arm tall
back cushion



MH90R
element w/ arm tall
back cushion

76/93/77/43
Boxspring = BX1
(surcharge)
Memory Comfort = MC1 (surcharge)
extra depth = XL1
(no surcharge)

86/93/77/43
Boxspring = BX2
(surcharge)
Memory Comfort = MC2 (surcharge)
extra depth = XL2
(no surcharge)

96/93/77/43
Boxspring = BX3
(surcharge)
Memory Comfort = MC3 (surcharge)
extra depth = XL3
(no surcharge)

106/93/77/43
Boxspring = BX4
(surcharge)
Memory Comfort = MC4 (surcharge)
extra depth = XL4
(no surcharge)

76/93/83/43
Boxspring = BX1
(surcharge)
Memory Comfort = MC1 (surcharge)
extra depth = XL1
(no surcharge)

86/93/83/43
Boxspring = BX2
(surcharge)
Memory Comfort = MC2 (surcharge)
extra depth = XL2
(no surcharge)

96/93/83/43
Boxspring = BX3
(surcharge)
Memory Comfort = MC3 (surcharge)
extra depth = XL3
(no surcharge)

106/93/83/43
Boxspring = BX4
(surcharge)
Memory Comfort = MC4 (surcharge)
extra depth = XL4
(no surcharge)



N60R
sofa w/ arm



N70R
sofa w/ arm



N80R
large sofa w/ arm



N90R
large sofa w/ arm



N100R
large sofa w/ arm



NH60R
sofa w/ arm tall back
cushion



NH70R
sofa w/ arm tall back
cushion



NH80R
large sofa w/ arm tall
back cushion



NH90R
large sofa w/ arm tall
back cushion



NH10R
large sofa w/ arm tall
back cushion

136/93/77/43
Boxspring = BX5
(surcharge)
Memory Comfort = MC5 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL5
(no surcharge)

156/93/77/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL7
(no surcharge)

176/93/77/43
Boxspring = BX9
(surcharge)
Memory Comfort = MC9 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL9
(no surcharge)

196/93/77/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL10
(no surcharge)

216/93/77/43
Boxspring = BX11
(surcharge)
Memory Comfort = MC11 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL11
(no surcharge)

136/93/83/43
Boxspring = BX5
(surcharge)
Memory Comfort = MC5 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL5
(no surcharge)

156/93/83/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL7
(no surcharge)

176/93/83/43
Boxspring = BX9
(surcharge)
Memory Comfort = MC9 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL9
(no surcharge)

196/93/83/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL10
(no surcharge)

216/93/83/43
Boxspring = BX11
(surcharge)
Memory Comfort = MC11 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL11
(no surcharge)

ELEMENTS WITH ARMPART LEFT



M60L
element w/ arm



M70L
element w/ arm



M80L
element w/ arm



M90L
element w/ arm



MH60L
element w/ arm tall
back cushion



MH70L
element w/ arm tall
back cushion



MH80L
element w/ arm tall
back cushion



MH90L
element w/ arm tall
back cushion

76/93/77/43
Boxspring = BX1
(surcharge)
Memory Comfort = MC1 (surcharge)
extra depth = XL1
(no surcharge)

86/93/77/43
Boxspring = BX2
(surcharge)
Memory Comfort = MC2 (surcharge)
extra depth = XL2
(no surcharge)

96/93/77/43
Boxspring = BX3
(surcharge)
Memory Comfort = MC3 (surcharge)
extra depth = XL3
(no surcharge)

106/93/77/43
Boxspring = BX4
(surcharge)
Memory Comfort = MC4 (surcharge)
extra depth = XL4
(no surcharge)

76/93/83/43
Boxspring = BX1
(surcharge)
Memory Comfort = MC1 (surcharge)
extra depth = XL1
(no surcharge)

86/93/83/43
Boxspring = BX2
(surcharge)
Memory Comfort = MC2 (surcharge)
extra depth = XL2
(no surcharge)

96/93/83/43
Boxspring = BX3
(surcharge)
Memory Comfort = MC3 (surcharge)
extra depth = XL3
(no surcharge)

106/93/83/43
Boxspring = BX4
(surcharge)
Memory Comfort = MC4 (surcharge)
extra depth = XL4
(no surcharge)



N60L
sofa w/ arm



N70L
sofa w/ arm



N80L
large sofa w/ arm



N90L
large sofa w/ arm



N100L
large sofa w/ arm



NH60L
sofa w/ arm tall back
cushion



NH70L
sofa w/ arm tall back
cushion



NH80L
large sofa w/ arm tall
back cushion



NH90L
large sofa w/ arm tall
back cushion



NH10L
large sofa w/ arm tall
back cushion

136/93/77/43
Boxspring = BX5
(surcharge)
Memory Comfort = MC5 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL5
(no surcharge)

156/93/77/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL7
(no surcharge)

176/93/77/43
Boxspring = BX9
(surcharge)
Memory Comfort = MC9 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL9
(no surcharge)

196/93/77/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL10
(no surcharge)

216/93/77/43
Boxspring = BX11
(surcharge)
Memory Comfort = MC11 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL11
(no surcharge)

136/93/83/43
Boxspring = BX5
(surcharge)
Memory Comfort = MC5 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL5
(no surcharge)

156/93/83/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL7
(no surcharge)

176/93/83/43
Boxspring = BX9
(surcharge)
Memory Comfort = MC9 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL9
(no surcharge)


196/93/83/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL10
(no surcharge)

216/93/83/43
Boxspring = BX11
(surcharge)
Memory Comfort = MC11 (surcharge)
seat extension motor. = A02 (surcharge)
extra depth = XL11
(no surcharge)

END ELEMENTS RIGHT



K70R
one arm chaise



KL90R
deep one arm chaise



KH70R
one arm chaise tall
back cushion



KC90R
deep one arm chaise
tall back cushion



EG70R
corner sofa with
ottoman



EC70R
corner sofa with
ottoman tall back
cushion

88/153/77/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
extra depth = XL7
(no surcharge)

108/176/77/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
extra depth = XL10
(no surcharge)

88/153/83/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
extra depth = XL7
(no surcharge)

108/176/83/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
extra depth = XL10
(no surcharge)

97/218/77/43
Boxspring = BX12
(surcharge)
Memory Comfort = MC12 (surcharge)
extra depth = XL12
(no surcharge)

97/218/83/43
Boxspring = BX12
(surcharge)
Memory Comfort = MC12 (surcharge)
extra depth = XL12
(no surcharge)

END ELEMENTS LEFT



K70L
one arm chaise



KL90L
deep one arm chaise




KH70L
one arm chaise tall
back cushion



KC90L
deep one arm chaise
tall back cushion



EG70L
corner sofa with
ottoman



EC70L
corner sofa with
ottoman tall back
cushion

88/153/77/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
extra depth = XL7
(no surcharge)

108/176/77/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
extra depth = XL10
(no surcharge)

88/153/83/43
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
extra depth = XL7
(no surcharge)

108/176/83/43
Boxspring = BX10
(surcharge)
Memory Comfort = MC10 (surcharge)
extra depth = XL10
(no surcharge)

97/218/77/43
Boxspring = BX12
(surcharge)
Memory Comfort = MC12 (surcharge)
extra depth = XL12
(no surcharge)

97/218/83/43
Boxspring = BX12
(surcharge)
Memory Comfort = MC12 (surcharge)
extra depth = XL12
(no surcharge)

FREE-STANDING ELEMENTS RIGHT



C70R
free-standing sofa
with ottoman

214/97/77/43
Boxspring = BX12
(surcharge)
Memory Comfort = MC12 (surcharge)
extra depth = XL12
(no surcharge)



C80R
free-standing sofa
with ottoman

234/97/77/43
Boxspring = BX13
(surcharge)
Memory Comfort = MC13 (surcharge)
extra depth = XL13
(no surcharge)



CH70R
free-standing sofa
with ottoman tall
back cushion

214/97/83/43
Boxspring = BX12
(surcharge)
Memory Comfort = MC12 (surcharge)
extra depth = XL12
(no surcharge)



CH80R
free-standing sofa
with ottoman tall
back cushion

234/97/83/43
Boxspring = BX13
(surcharge)
Memory Comfort = MC13 (surcharge)
extra depth = XL13
(no surcharge)

FREE-STANDING ELEMENTS LEFT



C70L
free-standing sofa
with ottoman

214/97/77/43
Boxspring = BX12
(surcharge)
Memory Comfort = MC12 (surcharge)
extra depth = XL12
(no surcharge)



C80L
free-standing sofa
with ottoman

234/97/77/43
Boxspring = BX13
(surcharge)
Memory Comfort = MC13 (surcharge)
extra depth = XL13
(no surcharge)



CH70L
free-standing sofa
with ottoman tall
back cushion

214/97/83/43
Boxspring = BX12
(surcharge)
Memory Comfort = MC12 (surcharge)
extra depth = XL12
(no surcharge)



CH80L
free-standing sofa
with ottoman tall
back cushion

234/97/83/43
Boxspring = BX13
(surcharge)
Memory Comfort = MC13 (surcharge)
extra depth = XL13
(no surcharge)

OTTOMANS



G60
ottoman

60/60/43/0
Boxspring = BX1
(surcharge)
Memory Comfort = MC1 (surcharge)
castors = RO
(surcharge)



G120
large ottoman

120/60/43/0
Boxspring = BX5
(surcharge)
Memory Comfort = MC5 (surcharge)
castors = RO
(surcharge)



G140
extra large ottoman

140/60/43/0
Boxspring = BX7
(surcharge)
Memory Comfort = MC7 (surcharge)
castors = RO
(surcharge)



G160
extra large ottoman

160/60/43/0
Boxspring = BX8
(surcharge)
Memory Comfort = MC8 (surcharge)
castors = RO
(surcharge)






ACCESSORIES

 U armpart pillow	 UAR pillow with non-slip matting (leather version)	 U92 plug-in headrest	 U55K plug-in headrest for 55 cm seat	 U60K plug-in headrest for 60 cm seat	 U70K plug-in headrest for 70 cm seat	 U80K plug-in headrest for 80 cm seat	 U90K plug-in headrest for 90 cm seat	 U100K plug-in headrest for 100 cm seat	Z base leg
46/52/0	60/60/0	59/11/22/0	45/11/22/0	50/11/22/0	60/11/22/0	70/11/22/0	80/11/22/0	90/11/22/0	

ARMPART VERSIONS

  S AR raf S AL laf arm A no surcharge NO OVERMEASURE /1/0	  S ZR re S ZL li armpart Z no surcharge NO OVERMEASURE	  S BR raf S BL laf arm B plus surcharge overm. + 2 cm per ap. 2/1/0	  SYR re SYL li armpart Y plus surcharge overm. + 2 cm per ap.	  SCR raf SCL laf arm C no surcharge overm. + 10 cm per ap. 10/1/0	  SXR re SXL li armpart X no surcharge overm. + 10 cm per ap.	  SDR raf SDL laf arm D plus surcharge overm. + 22 cm per ap. 22/1/0 armpart adjust. = SV1 (surcharge)	  SWR re SWL li armpart W plus surcharge overm. + 22 cm per ap. armpart adjust. = SV1 (surcharge)	  SER raf SEL laf armpart E no surcharge dim. - 8 cms	  SVR re SVL li armpart V no surcharge dim. - 8 cms
--	--	---	--	---	---	---	---	---	---

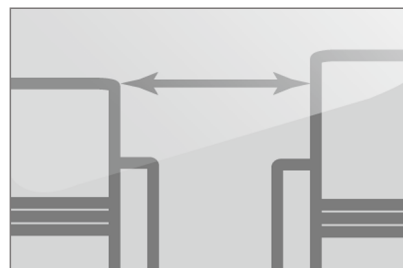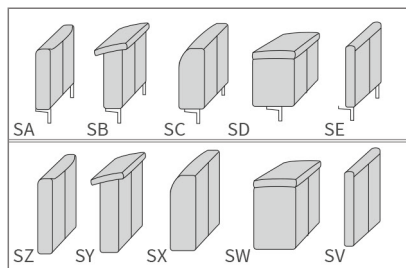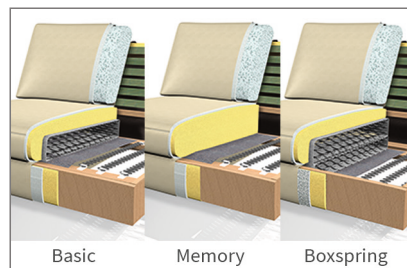

3 seat comforts/2 back heights

Basic, memory foam (surcharge) or Boxspring with additional pocket spring core under-springing (surcharge). Choose from 2 back-rest heights.

10 armparts - 2 flexible

SD and SW can be equipped with the armpart adjustment with notch function (item no. = SV).

Back heights - tall

The model is available with standard as well as tall backs (items with the appendix "H" and "C").

Two seat depths

The model is available in two seat depths. The seat depth is achieved via the back cushion thickness. Art. no. Excess depth = XL... (without surcharge).

Extendible bed surface

Some items can be fitted with the seat extension in return for a surcharge. The total depth extends. Item no. = A02.

ORDER INFORMATION

Armpart shapes:

The armchairs are available with the armparts SA/SZ and SE/SV, only.

Flexible armparts:

Maximum load capacity up to 25 kg, they are not seats.

Free-standing elements:

Please note that the orientation "left/right" is the position of the armpart.

Standard and extra tall elements:

Elements with standard back height are shown light grey coloured, extra tall elements dark grey coloured. They cannot be combined with each other.

Seam appearance:

Decorative, felled or double seams may appear different in fabric and leather versions. For manufacturing reasons, seams may be left out of the fabric version or replaced with simple

seams.

Contrasting thread:

This model is available in leather and some fabric colours with contrasting colour thread at no extra charge. You will find the specified colours in our fabric/leather trolley. Please state the no., otherwise tone-in-tone will be delivered.

All of the dimensions given are approximate dimensions in cm. We reserve the right to make changes. Dimensions are given as follows: width/depth/height/seat height and refer to the leg height of 13 cm and armpart SA (width 16 cm). Elements with ottoman have a total depth of ca. 97 cm depending on the ottoman at the end's depth.

Seat depth: approx. **56 cm**

Extra deep seat depth: ca. **59 cm**

Seat height: approx. **43/45/47 cm**

Armpart versions:

off-the-floor, with leg

SA - cubic, width approx. **16 cm**

SB - narrow, with pillow, width approx. **18 cm** - overmeasure + approx. **2 cm**, surcharge

SC - cubic, angled inside, width approx. **26 cm** - overmeasure + approx. **10 cm**

SD - wide, with pillow, width approx. **38 cm** - overmeasure + approx. **22 cm**, surcharge, also available with armpart adjustment

SE - very narrow, rounded on top, width approx. **8 cm** - deviation - approx. ca. **8 cm**

on-the-floor, with plastic glide

SZ - cubic, width approx. **16 cm**

SY - narrow, with pillow, width approx. **18 cm** - overmeasure + approx. **2 cm**, surcharge

SX - cubic, angled inside, width approx. **26 cm** - overmeasure + ca. **10 cm**

SW - wide, with pillow, width approx. **38 cm** - overmeasure + approx. **2 cm**, surcharge

SV - very narrow, rounded on top, width approx.

8 cm - deviation - approx. ca. 8 cm

The armparts SE and SV are smaller than the base armparts SA and SZ. Thus a deviation of approx. 8 cm is given. When ordering one armchairs in conjunction with the narrow armparts SE and SV, the ottoman at the front of the one arm chaise is not upholstered wide.

Model-related feature:

The upholstery is deliberately processed casually to create a certain visual appearance. Waving is not a quality defect, but a model-related feature that ensures optimum seating comfort.

Crease formation:

Fabric and leather stretch during use, „creases“ may form in the cover. This has no influence on use, function and service life and does not constitute a material defect.

Note on upholstery construction:

Ticking cushions have been used in the back. These may show under the cover. This is a typical feature of the product.

UAR cushion with anti-slip mat:

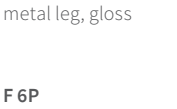
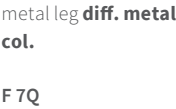
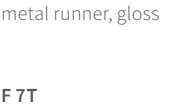
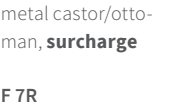
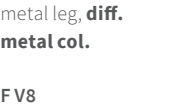
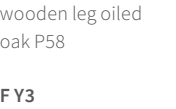
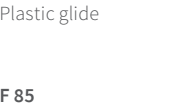
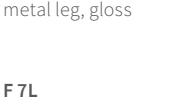
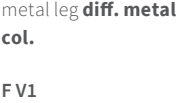
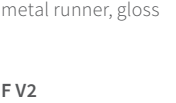
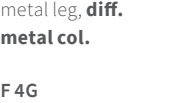
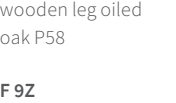
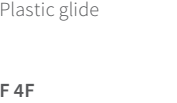
The UAR pillow in leather has an anti-slip mat. In everyday use, there is no discolouration/

material detachment on the leather. **Digital fabric/leather and colour samples:**

The visual appearance of the covers and colour samples may vary, samples in accordance - colour and structure deviations possible.

ATTENTION: Boxspring is not available together with the seat extension A02.

LEGS

ca. 13 cm/ seat height ca. 43 cm							
	metal leg, gloss	metal leg diff. metal col.	metal runner, gloss	metal castor/ottoman, surcharge	metal leg, diff. metal col.	wooden leg oiled oak P58	Plastic glide
	F 70	F 7P	F 7S	F 6R	F S1	F Y2	F 00
ca. 15 cm/ seat height ca. 45 cm							
	metal leg, gloss	metal leg diff. metal col.	metal runner, gloss	metal castor/ottoman, surcharge	metal leg, diff. metal col.	wooden leg oiled oak P58	Plastic glide
	F 6P	F 7Q	F 7T	F 7R	F V8	F Y3	F 85
ca. 17 cm/ seat height ca. 47 cm							
	metal leg, gloss	metal leg diff. metal col.	metal runner, gloss		metal leg, diff. metal col.	wooden leg oiled oak P58	Plastic glide
	F 7L	F V1	F V2		F 4G	F 9Z	F 4F

Leg and seat heights:

Due to different leg heights, the model is available in different seat and total heights. The leg version has to be indicated. With on-the-floor armparts, the seat height is achieved via an

armpart extended downwards. The legs F 7P/ F7Q/FV1, F70/F6P/F7L and FS1/FV8/F4G are wider than the narrow armparts and extend to the frame. **Castors for ottomans are available in two heights only, for techn. reasons.**

Castors for ottomans:

Every ottoman (except connected ottomans) can be equipped with castors for surcharge. The item no. is „RO“. Two of the castors can be fixed. They are available in a variety of heights.

Runners:

We assemble visibly matching legs instead of the runner under the corner elements. At the W-elements optically matching legs are mounted generally instead of the runner.

Plastic gliders:

The plastic glides are available for on-the-floor armpart designs, only.

Metal colours:

Some of the metal legs are available in different metal colours. Please indicate the colour when ordering.

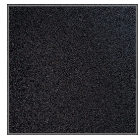
Leg and floor protection:

Slim furniture legs with a small gliding surface exert increased pressure on the floor. For sensitive floors, we recommend fitting glides/ an underlay to protect against scratches and pressure marks.

ORDER CHECKLIST

- Articles and cover
- Motorised seat extension (surcharge)
- Seating comfort Basic, Memory (surcharge) or Boxspring (surcharge)
- Armpart version
- Flexible armparts (surcharge)
- Seat height 43 cm/45 cm, 47 cm (not available with every leg)
- Extra deep seat (no surcharge)
- Leg design/-height - seat height
- Metal colour for legs
- Ottomans & Accessories
- Castors for ottomans (surcharge)
- Positioning diagram
- Contrasting thread

AVAILABLE METAL COLOURS

			
high-gloss chrome	silver	bronze	black
M20	M21	M56	M99

www.schillig.com



aleXx

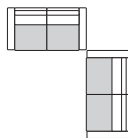
22850

LIVING EXAMPLES



Cover: Z69/50 cognac, SC armpart

sofa combination
N 70 - N 80




265x285



Cover: Z73/42 white, SB armpart

corner combination
EC 70L laf - NH 70K - KH 70R raf




325x218



Cover: Z77/95 graphite, SD armpart

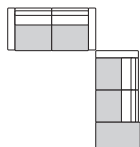sofa combination
N 80 - C 70 L laf




289x307



Cover: W82/27 blue, SC armpart

corner combination
N 80L laf - KL 90R raf



284x176



W.SCHILLIG

aleXx

22850

LIVING EXAMPLES




Cover: Z78/15 blush, SE arm



Cover: W82/51 stone, SC arm

corner combination
N 80L laf - KL 90R raf



284x176



Cover: W82/99 black, SC arm

corner combination
N 80L laf - KL 90R raf

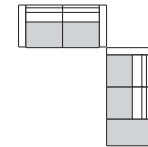


284x176



Cover: Z69/51 tobacco, SD arm

sofa combination
N 80 - C 70 L laf



289x307

LIVING EXAMPLES



Cover: Z69/22 light grey, SE armpart



Cover: Z69/50 cognac, SE armpart



Cover: Z78/21 steel, SE armpart

UPHOLSTERED FURNITURE FRAME STRUCTURE



The design of the cross-section shown here is based on a sample and serves to illustrate the upholstery structure.

- 1. Frame** – Beech wood structure
- 2. Seat suspension** with permanently elastic wave springs
- 3. Seat upholstery structure** – of **ergo**-PUR foam with coil spring core and diolen cover. Or seating comfort Memory with memory foam (surcharge). Or seating comfort Boxspring with additionally Bonell coil spring core next to the standard coil spring core (surcharge)
- 4. Back suspension** due to upholstery strap
- 5. Back upholstery structure** with high quality mix of polyester fibres and foam rods, filled in boxes

www.schillig.com



Upholstered furniture from passion.

For more than 75 years, this passion has led to the creation of high-quality and special pieces of furniture and designer furniture - sofas that combine elegant and contemporary design with first-class comfort. We stand for craftsmanship, trend-setting ideas, appealing design and know-how from Germany. The result is upholstered furniture with guaranteed first-class comfort and attention to detail. When selecting our materials, we prioritise quality, durability and compliance with the DIN & RAL guidelines of the DGM.

- Traditional craftsmanship down to the last detail
- High-quality materials for a long service life
- Careful & precise workmanship
- Cooperation with renowned furniture designers
- Production according to DIN & RAL quality guidelines of the Deutsche Gütegemeinschaft Möbel e.V.
- Regularly tested product quality
- Development at the Upper Franconian location in Ebersdorf near Coburg
- Carefully selected fabric and leather cover collections in many colours for a wide range of requirements.



German
quality
Made in Europe

W.SCHILLIG GmbH & Co. KG
Am Weinberg 20 - 22
96237 Ebersdorf bei Coburg
GERMANY
Telephone: +49 9562 37-0
Telefax: +49 9562 37-500
E-Mail: info@schillig.de


W.SCHILLIG