



ASSEMBLY

of the furniture legs

*Advice for your
upholstered
furniture
N° 13*

ENGLISH



21.1.7-07-04:D-E--1 Technical changes reserved.


W.SCHILLIG

For having pleasure with your product for a long time, we ask you to peruse the instructions before first usage.

The manufacturer takes no responsibility for damages or injuries resulting from improper use or incorrect operation. Warranty claims do not apply to mechanism changes or improper use.

Before starting, please make sure to follow the instructions of the assembling process suitable for the legs of your furniture.



Content	Page
<i>Unscrewing the transportation legs</i>	9
<i>Assembly of support legs and screw legs</i>	9
<i>Model-related assembly of legs of various lengths</i>	9
<i>Model-related assembly of metal runners</i>	10
<i>Assembly of wood or metal legs</i>	11
<i>Assembly of partially pre-assembled metal legs</i>	12

You have chosen correctly!
*To protect the original furniture legs against damaging, we packed them separately and for transporting there were mounted plastic legs under your upholstered furniture.
 We recommend to keep these for a possible relocation in the future.*


Operation instructions.

Before assembly, with 2 people, carefully lift the upholstered furniture and lie it on its back. Please make sure to use a clean and even bottom, to avoid damages in advance.

Note for all of the following variants of leg assembly:
 Not all of the predefined holes must be used (model-related).

Before you can mount the original legs, the transportation legs must be screwed out.

▷ Fig. 1

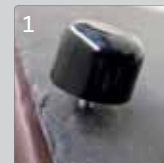

Assembly of height adjustable **SUPPORT LEGS**:

Because of stability reasons there are height adjustable support legs enclosed for some of the furniture. After screwing in the support legs onto the bottom and in the middle of the furniture and positioning them carefully, you will be able to control the height of the support legs. The support leg **has to be adjusted on floor level**. ▷ Fig. 2



Assembly of **SCREW LEGS**:

After unscrewing the transportation legs, you can carefully screw in the enclosed original legs into the thread of the same drill holes. ▷ Fig. 3

In order to offset any unevenness in the floor, spacing washers are enclosed. You should secure these together with the legs of the furniture.




Model-related assembly of **LEGS** of various **LENGTHS**:

In respect of upholstered furniture with legs of various lengths, you must ensure that the longest legs are at the **front** and the shortest legs at the **back**.

▷ Fig. 4 Examples of positioning


It is recommended that felt pads will be affixed in respect of sensitive floors.

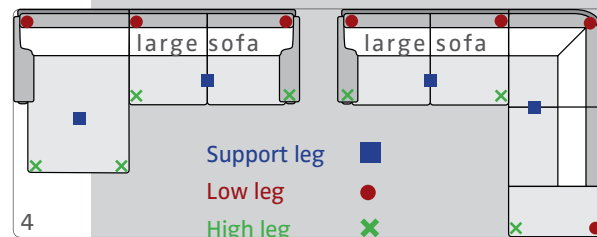


Model-related assembly of **METAL RUNNERS**:

According to configuration and for technical manufacturing reasons, different legs are mounted for your upholstered furniture.

► **Fig. 5** Examples

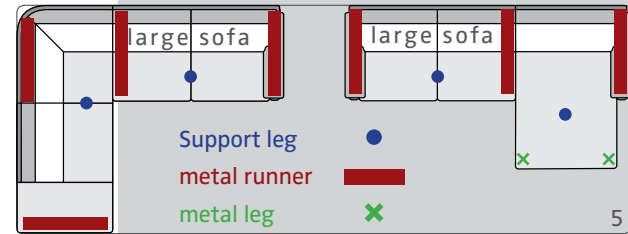

As already described, firstly screw out the transportation legs. You can now tightly screw in the threaded screw(s) at the same position. ► **Fig. 6** and **7**

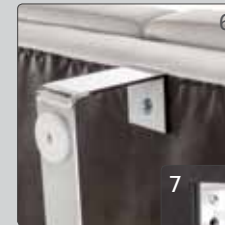

In addition, certain legs must be fixed with Spax screws to avoid the legs from twisting. Before screwing in, always ensure that these are correctly aligned. (No predefined hole.)

It is recommended that felt pads will be affixed in respect of sensitive floors.

Assembly of **WOOD OR METAL LEGS:**

After unscrewing the transportation legs, you can attach the wood or metal legs with the hexagonal head screws at the same position. Screw them in carefully. The assembly intended drill-holes vary depending on the type of the leg.

Washers are also delivered for certain versions, please use them as well – as shown in the examples below.

In addition, some legs must be fixed with Spax screws to avoid the legs from twisting. Before screwing in the Spax screws, ensure that the leg is correctly aligned (**No predefined hole.**)

Examples of legs:



It is recommended that felt pads will be affixed in respect of sensitive floors.

Assembly of **PARTIALLY PRE-ASSEMBLED METAL LEGS:**

Unscrew the transportation legs. Now you **have to** screw in the short hexagonal head screw at the same position into the installed retainer. Please screw in carefully into the thread – do not over tighten. ▶ Fig. 8 and 9

Now place the leg on the mounting and affix it with the long hexagonal head screws
▶ Fig. 10

Finally, carefully tap the plastic protective cap into place. ▶ Fig. 11

It is recommended that felt pads will be affixed in respect of sensitive floors.

